

TORSO ROTATION

# **OWNER'S MANUAL**



#### ! CAUTION

Read all precautions and instructions in this manual before using this equipment

14Z Rev G

### ! CAUTION

Read all precautions and instructions in this manual before using this equipment.

# Table Of Contents

mportant Safety Instructions	3
nstructions	5
Parts List	6
xploded View	8
Лeasurement Guide	10
Assembly Instructions	11
Assembly	12
Adjust Instructions	-25
xercise Instructions	-26
Naintenance Schedule	27
General Maintenance Information	28
Veight Training Tips	29

Please assemble according to the actual **Weights and Shroud** you buy!

# **Important Safety Instructions**

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- 1. Read all instructions before using the equipment.

  These instructions are written to ensure your safety and to protect the unit.
- 2. Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- 3. The product should only be used on a level surface and is with 0.5 meters space around the product.

  Do not use the equipment outdoors.
- 4. Do not allow children on or near the equipment. And children are not allowed to use this equipment.

  Teenagers should use this equipment with adult supervision.
- 5. Do not overexert yourself or work to exhaustion.

  Do not attempt to lift more weight than you can control safely.

If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.

- 6. This equipment is not used as medical apparatus and instruments.
- 7. Never operate the unit when it has been dropped or damaged.

  Never drop or insert anything into any opening in the equipment.

  Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.

  Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear.

  Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- 8. Be careful when getting on or off the equipment.
- 9. Wear proper exercise clothing and shoes for your workout, no loose clothing.


## **Important Safety Instructions**

### **Personal Safety During Assembly**

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

## **Training Area and Free Area**

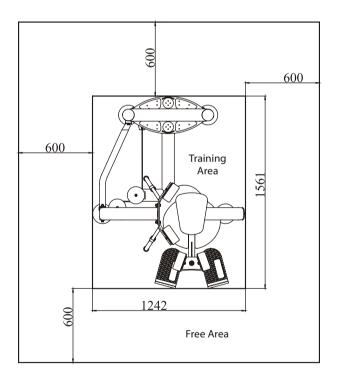

## **Specifications**

Class: S

Maximum Wt. Capacity: 91kg/200lbs Maximum User Weight: 150kg/330lbs Product Total Surface: 1561\*1242mm


Product Total Mass (Short Shroud): 142.1kg/313lbs

## Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.


## **Tools Required**

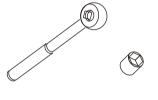

Ratchet Wrench and Socket



Adjustable Wrench

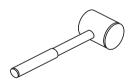

Rubber Mallet



Hex Key Wrench Set



Phillips Screwdriver

# Parts List

## NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED.


Item No.	Description	Qty	Item No.	Description	Qty
1	Weight Stack Frame	1	37	Arm Pad	4
2	Main Frame	1	38	Shroud Retainer Plate	3
3	Cam	1	39	Rear Shroud	1
4	Swivel Frame	1	40	Left Shroud Retainer Plate	1
5	Angle Support	1	41	Rear Support	1
6	Support Of Chest Pad	1	42	Arc Bracket	1
7	Cross Brace	1	43	Top Front Shroud	1
8	Bottom Cross Brace	1	44	Front Support	1
9	Rear Cross Brace	1	45	Front Shroud	1
10	Seat Pad Support	1	47	Button	19
11	Joy Stick	1	48	Top Rear Shroud-A	1
12	Pin	1	49	Short Shroud Retainer Plate	2
13	Adjust Spacer	2	50	4.5" Pulley Cover	4
14	Drive Support	1	52	Plastic Tube Guide	2
15	Slip Rod	2	53	Plug Rt50*100	1
16	Backstop	1	54	Ф25 Aluminium Grip Cap	4
17	Wheel Of Rotation	1	55	Φ25 Aluminium Grip Ring	4
18	Axis Of Rotation	1	57	Taper Head	1
19	Scaleboard	1	58	Adjustable Support Sleeve	1
20	Grip Ф30*Ф22*270	2	59	Weight Rubber Bumper	2
21	Grip Ф30*Ф22*180	2	60	Foot Sleeve	2
22	Guide Rod	2	61	Rubber Sleeve	3
23	Cable 1	1	62	Bushing	1
24	Cable 2	1	63	4.5" Pulley	4
25	Rod	1	64	3.5" Pulley	2
26	Pulley Bracket	1	65	Bearing 6006-2Z	2
27	Adjustable Support	1	66	Taper Bearig 30206	2
28	Plate	2	67	0.75" Bearing Ф35*Ф19.1*13.5	2
29	Bearing Washer	2	68	Linear Bearing Φ25	3
30	Adj. Foot Plate	4	69	Spring	1
31	Selector Pin W/Coil	1	70	Self-Tapping Screw St 4.2*10	4
32	Top Plate	1	71	Flat Fhilips Screw M5*16	17
36	Seat Pad	1	72	Foot Plate	2

# Parts List


## NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED.


Item No.	Description	Qty	Item No.	Description	Qty
73	Grease Cap	1	108	Hex Key S=8	1
74	Hex Head Bolt M10*135	4	109	Hex Key S=3/32"	1
75	Hex Head Bolt M10*20	2	110	Wrench Ф6*117	1
76	Hex Head Bolt M10*100	2	111	Lube	1
77	Hex Head Bolt M10*80	2	112	Socket Head Cap Screw M12*95	2
78	Hex Head Bolt M10*75	1	113	Spacer	1
79	Hex Head Bolt M10*50	3	114	Hole Clip	3
80	Hex Head Bolt M10*35	2	116	Hex Key S=3/16"	1
81	Hex Head Bolt M10*30	11	117	Hex Flanged Nut 1/2"-13	1
82	Button Head Cap Screw M8*30	2	118	Cable Connector Φ20*77*1/2"-13	1
83	Button Head Cap Screw M8*55	1	119	Hex Key S=4	1
84	Hex Head Bolt M8*12	8	120	Flat Fhilips Screw M5*25	2
85	Button Head Cap Screw M6*12	2	121	Rivet Nut M8	2
86	Socket Head Cap Screw M12*30	2	122	Rubber Plug Ф29*Ф19*10	2
87	Socket Head Cap Screw M10*50	3	123	Spring Washer Φ8	2
88	Socket Head Cap Screw M8*30	1	124	Plug	2
89	Socket Head Cap Screw M8*20	5	125	Button Ф8.1*7	10
90	Socket Head Cap Screw M5*20	2	126	Plastic Cover Φ21*5.7	
91	Socket Head Cap Screw M5*10	8	127	Plastic Washer Φ13*3	
92	Flat Head Cap Screw M10*30	4	128	Connect Button	4
93	Flat Washer Φ9*Φ22*1.6	2	129	Plug	
94	Nut	4	130	Rear Side Cover	2
95	Flat Washer Ф13*Ф24*2.5	4	131	Plastic Block	12
96	Flat Washer Φ11*Φ20*2	41	132	L Bracket	2
97	Flat Washer Φ9*Φ16*1.6	17	133	Hex Head Bolt M8*30	2
98	Flat Washer Φ5.5*Φ10*1	4	134	Weight Stack Space	2
99	Nylon Lock Nut M10	16	135	Top Rear Shroud	1
100	Nylon Lock Nut M8	8	136	Shroud	1
101	Nylon Lock Nut M5	2	137	Socket Set Screw M6*15	2
102	Hex Nut M10	1	138	Hex Key S=3	1
103	Hex Nut M6	2	139	Flat Washer Φ38*Φ11*5	1
104	Socket Set Screw 10-32*3.2	8	140	Spring Washer Φ10	1
106	Hex Key S=5	1	142	Plectane	1
107	Hex Key S=6	1			


# Exploded View

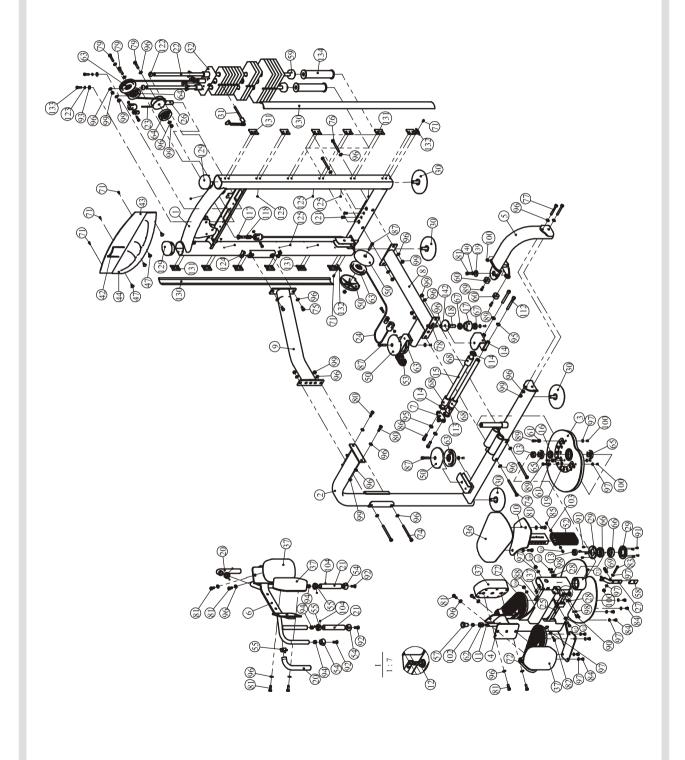


# Exploded View

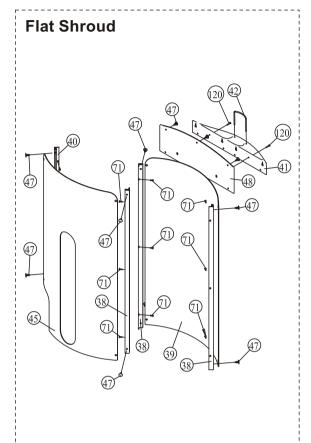

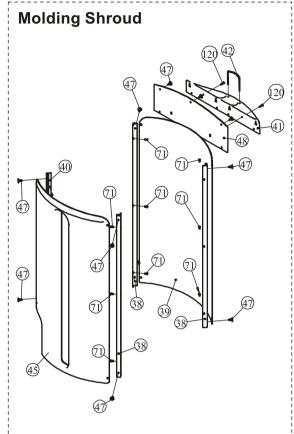

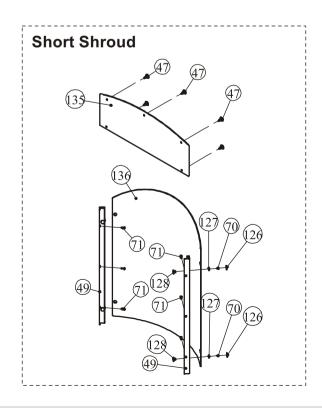

# Measurement Guide

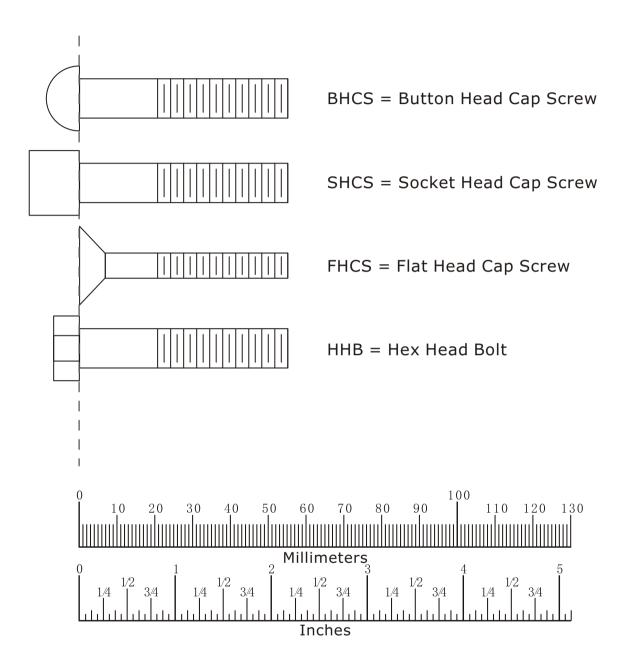

Diameter of bolt (mm/inch)	M6(1/4")	M8(5/16")	M10(3/8")	M12(1/2")	M16(5/8")
Tightening torque (N.m)	9~12	22~30	45~59	78~104	193~257
Operational methods for adult men	The strength of the wrist	The strength of the wrist and forearm	The strength of the entire arm	The strength of the arm and upper body	with all strength

## **Assembly Instructions**

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.

# **⚠** NOTE


As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

## STEP 1

- 1. Attach two Adjustable Foot Plate (#30) to the Weight Stack Frame (#1).
- 2. Attach three Shroud Retainer Plate (#38) and one Left Short Shroud Retainer Plate (#40) to the Weight Stack Frame(#1), using: twelve M5\*16 Flat Philips Screws (#71)

Note: Wrench Tighten Screws.

Here is the assembly instruction for Flat Shroud and Molding Shroud!

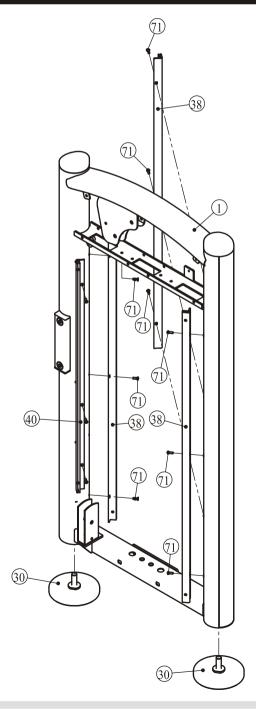

## STEP 1


- 1. Attach two Adjustable Foot Plate (#30) to the Weight Stack Frame (#1).
- 2. Attach two Short Shroud Retainer Plate (#49) to the Weight Stack Frame (#1), using:

six M5\*16 Flat Philips Screws (#71)

3. Attach nine Φ8.1\*7 Buttons (#125) to the Weight Stack Frame (#1).

Note: Wrench Tighten Screws.


## Here is the assembly instruction for Short Shroud!

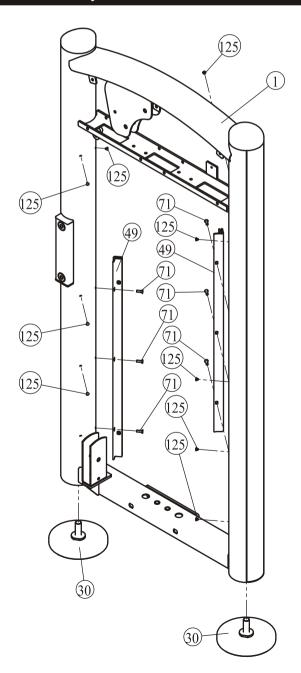

### STEP 2

- 1. Attach two Adj. Foot Plate (#30) to the Main Frame (#2).
- 2. Attach the Bottom Cross Brace (#8) to the Weight Stack Frame (#1), Using: two M10\*100 HHB (#76) four Φ11\*Φ20\*2 Flat Washers (#96) two M10 Nylon Lock Nuts (#99)
- 3. Attach the Bottom Cross Brace (#8) to the Main Frame (#2), Using: two M10\*135 HHB (#74) four Φ11\*Φ20\*2 Flat Washers (#96) two M10 Nylon Lock Nuts (#99)
- 4. Attach the Rear Cross Brace (#9) to the Weight Stack Frame (#1), Using: two M10\*20 HHB (#75) two Φ11\*Φ20\*2 Flat Washers (#96)
- 5. Attach the Rear Cross Brace (#9) to the Main Frame (#2), Using: two M10\*135 HHB (#74) four Φ11\*Φ20\*2 Flat Washers (#96) two M10 Nylon Lock Nuts (#99)


Note: Hand tighten Bolts and Nylon Lock nuts.

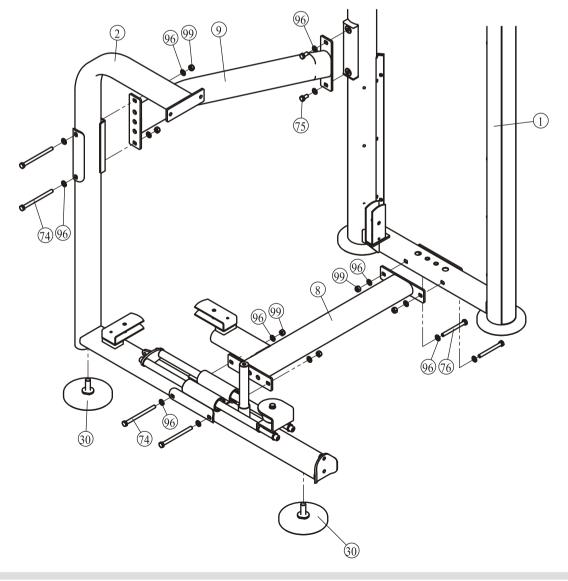

### STEP 3

- 1. Attach the Cam (#3) to Main Frame (#2).
- 2. Attach the Swivel Frame (#4) to the Cam (#3), Using: one Φ37\*Φ30.5\*15 Adjust Spacer (#13)
- 3. Attach the Angle Support (#5) to Main Frame (#2), Using:
  one Φ37\*Φ30.5\*15 Adjust Spacer (#13) two M10\*80 HHB (#77)
  three Φ11\*Φ20\*2 Flat Washers (#96) one M10 Nylon Lock Nut (#99)
  one M10\*30 HHB (#81) one Φ38\*Φ11\*5 Big Washer (#139)
  one Φ10 Spring Washer (#140)
- 4. Attach the Support of Chest Pad (#6) to the Main Frame (#2), Using: two M10\*35 HHB (#80) four Φ11\*Φ20\*2 Flat Washers (#96) two M10 Nylon Lock Nuts (#99)


Note: Wrench Tighten bolts and Nylon Lock nuts.

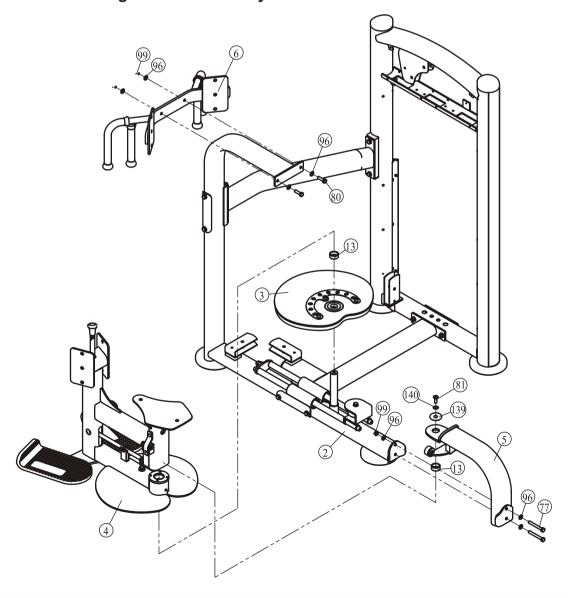

## STEP 4

Observe sequence when fitting STEP 3.

Make sure that the L PLATE is 3mm higher than the SHAFT before mounting bolt.

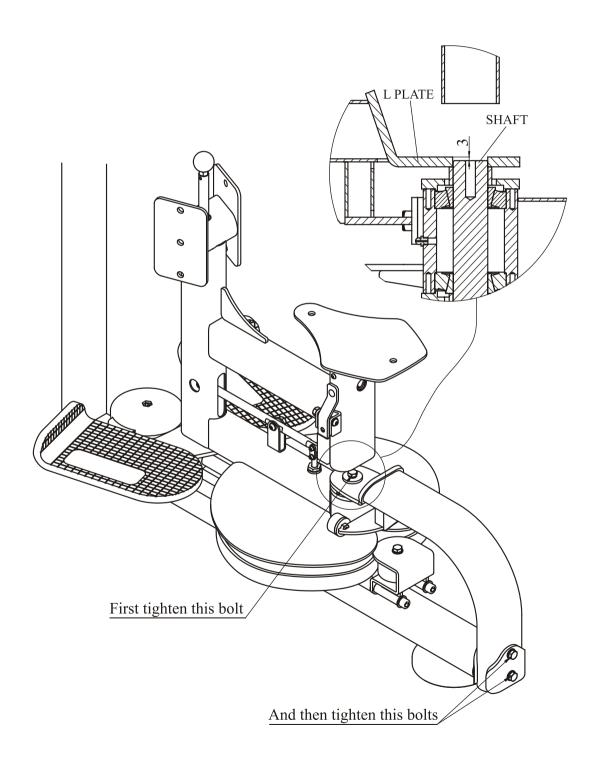

### STEP 5

1. Attach:

two Φ19\*1177 Guide Rods (#22) two Weight Stack Spaces (#134) three Weight Plate 10LBS (#34)

five Weight Plate 15LBS (#35) seven Weight Plate 5LBS (#33)

one Top Plate (#32)

to the Weight Stack Frame (#1) using:

two M8\*30 HHB (#133) two Φ9\*Φ22\*1.6 Flat Washers (#93) two Φ8 Spring Washers (#123) two Φ29\*Φ19\*10 Rubber Plugs (#122)


two Φ63.5\*Φ19\*25.4 Weight Rubber Bumper (#59)

2. Attach the Selector Pin W/Coil (#31) to the Top Plate (#32).

3. Attach eight  $\Phi 8 \Phi 20^2 3$  Buttons (#47) to the Top Plate (#32).

Note: Wrench Tighten Bolts and Nylon Lock nuts.

## Here is the assembly instruction for 150LBS Weights!

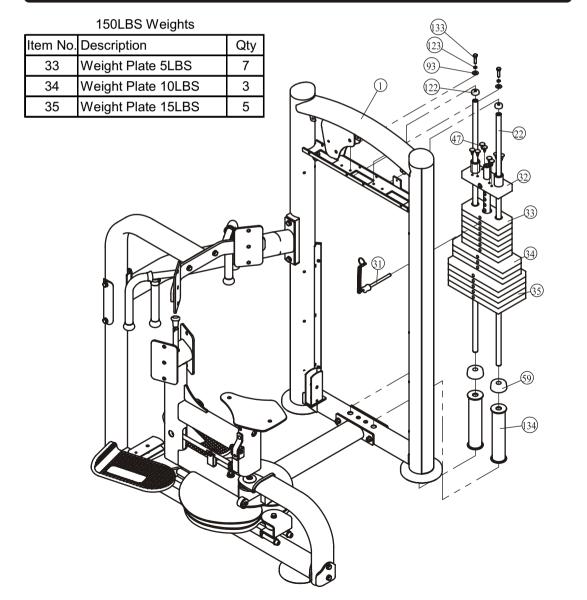

### STEP 5

1. Attach:

two  $\Phi$ 19\*1177 Guide Rods (#22) two  $\Phi$ 63.5\* $\Phi$ 19\*25.4 Weight Rubber Bumper (#59) two Weight Stack Spaces (#134) ten Weight Plate 15LBS (#35) two Weight Plate 5LBS (#33)

one Top Plate (#32)

to the Weight Stack Frame (#1) using:


two M8\*30 HHB (#133) two Φ8 Spring Washers (#123) two Φ9\*Φ22\*1.6 Flat Washers (#93) two Φ29\*Φ19\*10 Rubber Plugs (#122)

2. Attach the Selector Pin W/Coil (#31) to the Top Plate (#32).

3. Attach eight  $\Phi 8 \Phi 20^2 3$  Buttons (#47) to the Top Plate (#32).

Note: Wrench Tighten Bolts and Nylon Lock nuts.

## Here is the assembly instruction for 200LBS Weights!

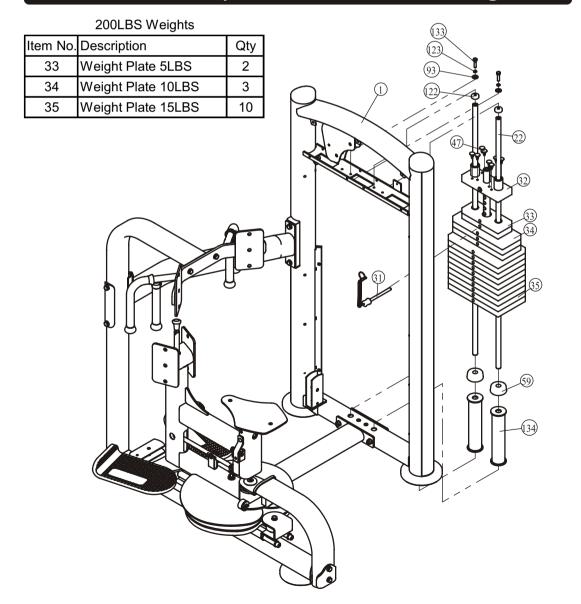

#### STEP 6

- 1. Attach the Cable 1 (#23) to Top Plate (#32) and Weight Stack Frame (#1).
- 2. Attach One 4.5" Pulley (#63), One 3.5" Pulley (#64) to the Weight Stack Frame (#1), Using:

two M10\*50 HHB (#79)

four Φ11\*Φ20\*2 Flat Washers (#96)

two M10 Nylon Lock Nuts (#99)

3. Attach One 3.5" Pulley (#64) to One Pulley bracket (#26) and the Cable 1 (#23), Using:

one M10\*50 HHB (#79)

two Φ11\*Φ20\*2 Flat Washers (#96)

one M10 Nylon Lock Nut (#99)

- 4. Attach the Cable 2 (#24) to the Cross Brace (#7).
- 5. Attach One 4.5" Pulley (#63) to the Main Frame (#2), Using:

one 4.5" Pulley Cover (#50)

one M10\*50 SHCS (#87)

one Φ11\*Φ20\*2 Flat Washer (#96)

one M10 Nylon Lock Nut (#99)

6. Attach One 4.5" Pulley (#63) to the Cross Brace (#8), Using:

one 4.5" Pulley Cover (#50)

one M10\*50 SHCS (#87)

one Φ11\*Φ20\*2 Flat Washer (#96)

one M10 Nylon Lock Nut (#99)

7. Attach One 4.5" Pulley (#63) to the Weight Stack Frame (#1), Using:

two 4.5" Pulley Covers (#50)

one M10\*50 SHCS (#87)

one M10 Nylon Lock Nut (#99)


8. Attach the Cable (#24) to the Pulley bracket (#26), using:

one 1/2"-13 Hex Flanged Nut (#117)

one Φ20\*77\*1/2"-13 Cable Connector (#118)

Note: Wrench Tighten Bolts and Nylon Lock nuts.


## STEP 6

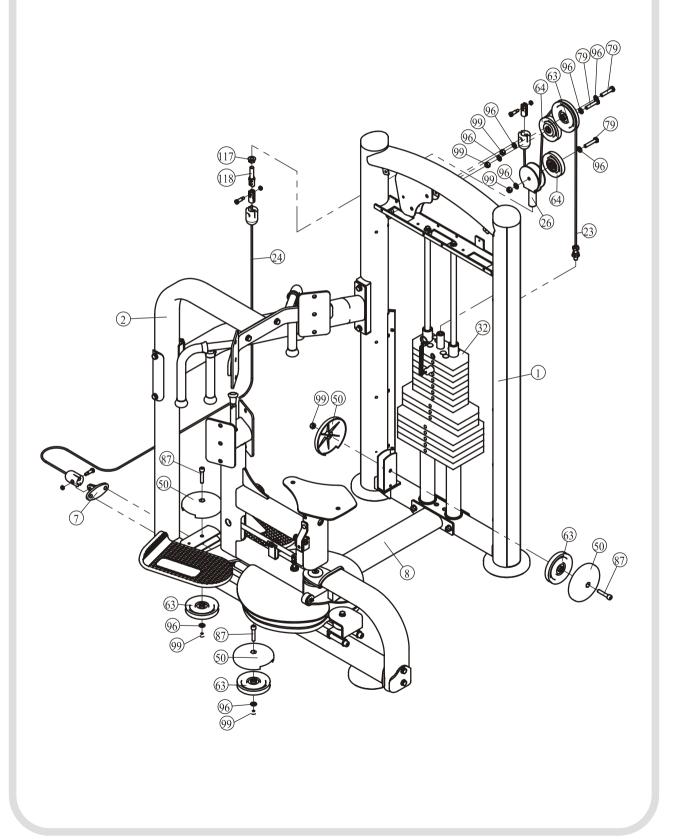

### STEP 7

- 1. Attach the Seat Pad (#36) to the Seat Pad Support (#10), Using: two M10\*30 HHB (#81) two Φ11\*Φ20\*2 Flat Washers (#96)
- 2. Attach two Arm Pad (#37) to the Support of Chest Pad (#6), Using: four M10\*30 HHB (#81) four Φ11\*Φ20\*2 Flat Washers (#96)
- 3. Attach two Arm Pad (#37) to the Swivel Frame (#4), Using: four M10\*30 HHB (#81) four Φ11\*Φ20\*2 Flat Washers (#96)

Note: Wrench Tighten Bolts and Nylon Lock nuts.

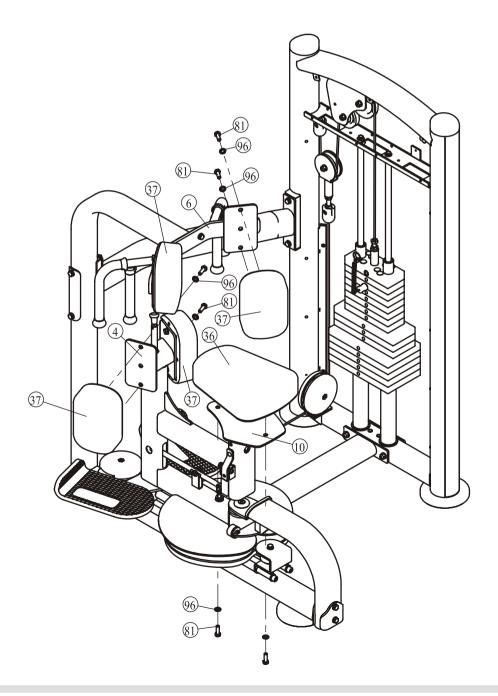


#### STEP 8

- 1. Attach one Front Shroud (#45) and one Rear Shroud (#39) to the Weight Stack Frame (#1), using: eight Φ8\*Φ20\*23 Buttons (#47)
  - eight Φ8\*Φ20\*23 Buttons (#47)
- 2. Attach the Top Front Shroud & The Front Support (#43, #44) to the Weight Stack Frame (#1), using: three M5\*16 Flat Philips Screws (#71)
- 3. Attach the Top Rear Shroud-A (#48) and the Rear Support (#41) to the Weight Stack Frame (#1), using:
  three Φ8\*Φ20\*23 Buttons (#47) two M5\*25 Flat Philips Screws (#120)

Note: Wrench Tighten Bolts and Nylon Lock nuts.

## Here is the assembly instruction for Flat Shroud!

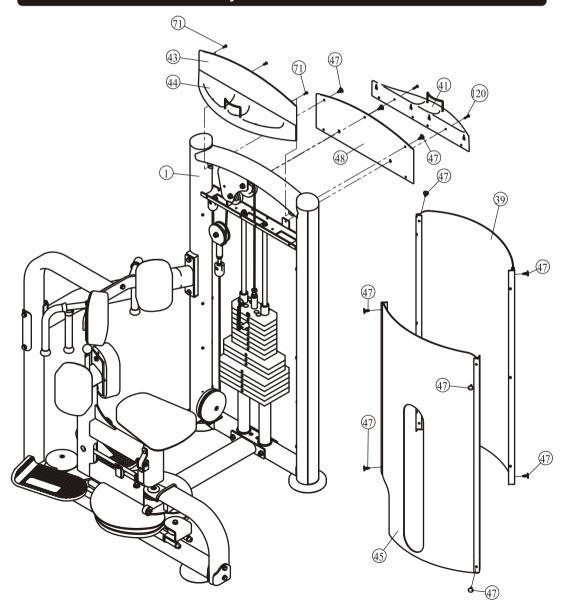


#### STEP 8

- 1. Attach one Front Shroud (#45) and one Rear Shroud (#39) to the Weight Stack Frame (#1), using: eight Φ8\*Φ20\*23 Buttons (#47)
- 2. Attach the Top Front Shroud & The Front Support (#43, #44) to the Weight
  - Stack Frame (#1), using: three M5\*16 Flat Philips Screws (#71)
- 3. Attach the Top Rear Shroud-A (#48) and the Rear Support (#41) to the Weight Stack Frame (#1), using:

three  $\Phi 8^*\Phi 20^*23$  Buttons (#47) two M5\*25 Flat Philips Screws (#120)

Note: Wrench Tighten Bolts and Nylon Lock nuts.

## Here is the assembly instruction for **Molding Shroud!**

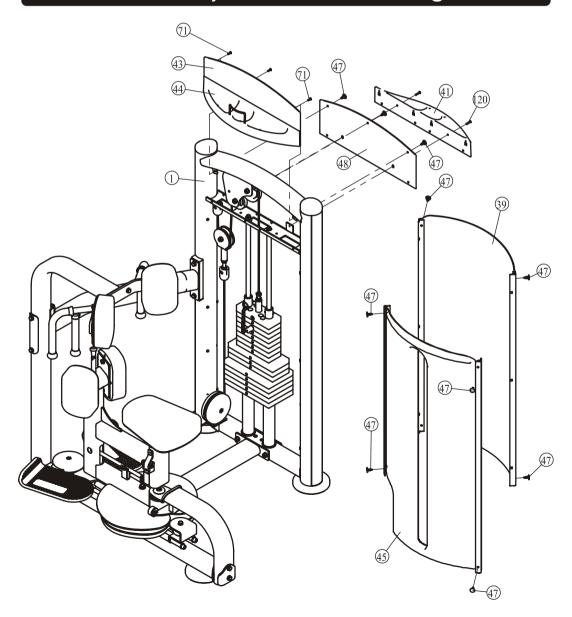

### STEP 8

1. Attach one Shroud (#136) to the Weight Stack Frame (#1), using:

four Φ13\*3 Plastic Washers (#127) four Φ21\*5.7 Plastic Covers (#126) four Φ18\*12 Connect Button (#128) four ST4.2\*10 Self-Tapping Screws (#70)


2. Attach the Top Front Shroud & The Front Support (#43, #44) to the Weight Stack Frame (#1), using:

four Φ8\*Φ20\*23 Buttons (#47) three M5\*16 Flat Philips Screws (#71)

3. Attach the Top Rear Shroud (#135) to the Weight Stack Frame (#1), using: five Φ8\*Φ20\*23 Buttons (#47)

Note: Wrench Tighten Bolts and Nylon Lock nuts.

## Here is the assembly instruction for **Short Shroud!**

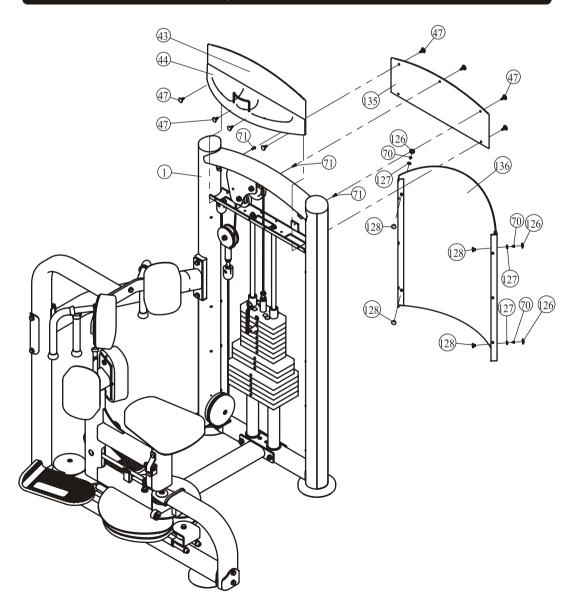

# **Adjust Instructions**

### **Seat Pad adjustment**


- 1. Push the Adjustable Support and adjust the Seat Pad to the desired position.
- 2. Make sure the pin get into the hole completely.

### **Swivel Frame Adjustment**

- 1. Push the Joy Stick and adjust the Swivel Frame to the desired position on the Cam.
- 2. Make sure the pin get into the hole completely.


### The use of Selector Pin


- 1. Select an appropriate weight and put the Selector Pin into the hole on it.
- 2. Make sure the Selector Pin gets into the hole completely.

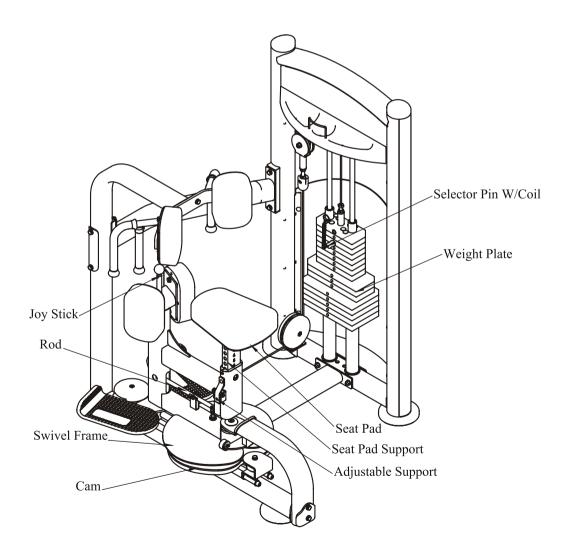

## **Exercise Instructions**


### TORSO ROTATION

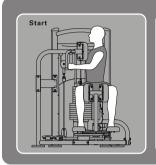


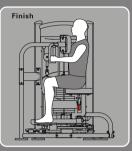



- Select an appropriate weight.
   Adjust seat pad for desired positioning.
- 3. Select desired startup positioning, Hold handle, move slowly toward center from right/left side.
- 4. Slowly return to the starting position.

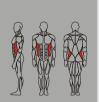

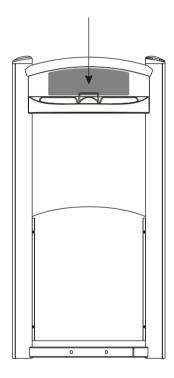

### Exercise Instructions

- 1. Select an appropriate weight.
- 2. Adjust seat pad for desired positioning.
- 3. Select desired startup positioning, Hold handle, move slowly toward center from right/left side.
- 4. Slowly return to the starting position. (Adjust weight according to the select pin)

# Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY					
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY						
Clean; Upholstery	DAILY	WEEKLY						
Inspect; Cables or Belts and their tension	DAILY	WEEKLY						
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS						
Inspect; All Decals	WEEKLY	3 MONTHS						
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS						
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS						
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS						
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS						
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY						
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY						
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS						

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

## **General Maintenance Information**

### Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- \* Check all pieces for signs of visible wear or damage.
- \* Check springs in snap hooks and pull-pins for proper tension and alignment.
- \* If the spring sticks or has lost its rigidity, replace it immediately.

#### **Upholstery:**

- \* To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- \* Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- \* Replace ripped or warn upholstery immediately.
- \* Keep sharp or pointed objects clear of all upholstery.

#### Decals:

\* Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

#### **Nuts and Bolts:**

- \* Inspect all nuts and bolts for any loosening and tighten if needed.
- \* Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

#### **Anti-Skid Surfaces:**

\* These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

#### **Belts and Cables:**

- \* We uses only high quality belt, and mil-spec cables.
- \* Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- \* While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- \* Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

#### **Belt and Cable Tension:**

- \* Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- \* Check slack in cables and re-adjust cable tension if needed.

### Seat Sleeves, Guide Rods:

- \* Wipe down adjusting tubes with a dust free rag before applying lubricant.
- \* Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

#### **Linear Bearings:**

\* Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

### PLEASE KEEP THIS FOR YOUR RECORDS

# Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.







